

Wayne Out There (.com)
wayne-out-there
Stuff that matters to Wayne

How to Remove or Delete the Tone for Repeater Use in Baofeng UV-5R

Posted on March 22,2016 by admin

This is part of a series of posts that hopefully will save people a bunch of time.

How to Delete or Remove the Tone for Repeater Use in Baofeng UV-5R

Important note: if you wait more than 9 seconds between any step below it will automatically go back to home screen and you have to start again, so work those fingers, baby!

1. Press Menu button
2. Press 13 on keypad (T-CTCS). This will bring you to the section of menu where you can edit the tone frequency which will get you into repeaters.
3. Press menu button again. This means "I am now editing this part of the menu". You'll see a little arrow appear if you have options to see by using the arrow keys. In this case, a menu will appear because you can toggle between all the tone options.
4. Toggle with up/down arrows to the setting you want. You can either press the button repeatedly, or press and hold which will turbo-speed you through the frequencies, but what you need to do is get to *one step above 254HZ* or *one step below 67HZ* which will show the 'OFF" option.
5. Press Menu again. This means "I am now saving the settings I edited in step 4. If the voice audio is on you will hear 'confirm' which means victory
6. Press 'exit' to get back to the home screen or just wait the 9 seconds or more and it will go there for you automatically

Note for this setting: You will *not* see any indication on your home screen that you have no tone on until you transmit. When you transmit you will *NOT* see CT lettering appear which means you successfully deleted/removed the tone. Done! You've got rid your tone thingy. Go to this page for more tutorials as I write them: **RANDOM BAOFENG UV-5R TUTORIALS**

Posted in:Amateur Radio,Tutorial | Tagged:Baofeng,Frequency,Ham Radio,How To,Remove,Tone,Tutorial,Uv-5r,Uv-5r Plus | With 0 comments